Halton CBH – 用于明装墙角安装的主动式冷梁




概览


- 墙角安装,能进行制冷、供热和通风
- 操作既简单又卫生,无需频繁维护

产品型号和配件

- 有同时配有制冷和供热功能的盘管的型号
- 有多个冷水/热水管接头位置可供选择
- 盘管配有排气阀

Dimensions

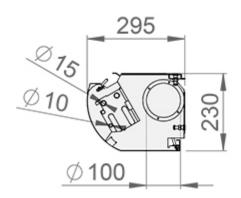


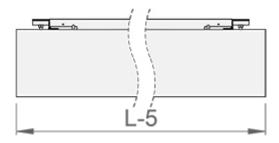



Coil length	1500,16004700
L-5	1795,18954995
kg/m	10

Location of the pipe connections

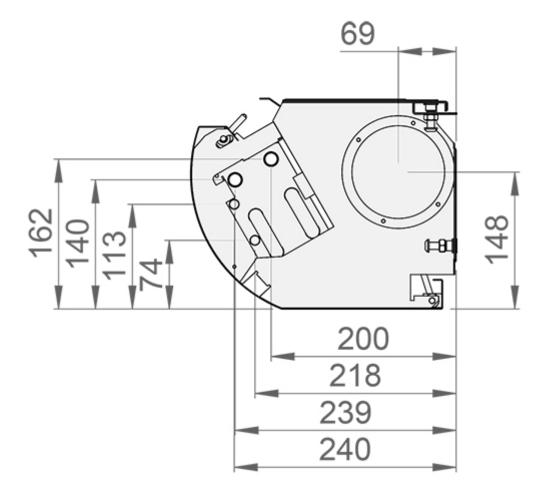



Material

Part	Material	Finishing	Note
Front panel	Pre-painted galvanised steel	Polyester-painted, White RAL 9003 or RAL 9010 (20 % gloss)	Polyester-epoxy- painted Special colours available
Supply air plenum	Galvanised steel		
Brackets	Galvanised steel		
Coil pipes	Copper		
Coil fins	Aluminium		

Cooling/heating water pipe connections are Cu15/Cu10 with a wall thickness of 0.9-1.0 mm fulfilling the European Standard EN 1057:1996.

The maximum operating pressure of chilled/hot water pipework is 1.0 MPa. The supply air ductwork connection is D100 mm.




Accessories

Accessory/model	Code	Description	Note
Combined cooling and heating coil	TC = H or F	H = Coil with hot water circulationF = Coil with hot water circulation and air venting valves	Cooling/heating copper water pipe connestions are Ø 15/10 mm
Coil equiped with valves for venting	TC = D or F	 D = Coil with cold water circulation and air venting valves F = Coil with hot water circulation and air venting valves 	Cooling/heating copper water pipe connestions are Ø 15/10 mm
Water pipe connections	WD = S or O	S = straight connection O = pipe connection of the heat exchanger at the opposite end from the supply air connection	
Duct cover	Made upon request, please contact sales for details	Lenghts: 800, 900, 2500 mm	Pre-painted galvanised steel, Polyester-painted white (RAL 9003, 20% gloss)



Function

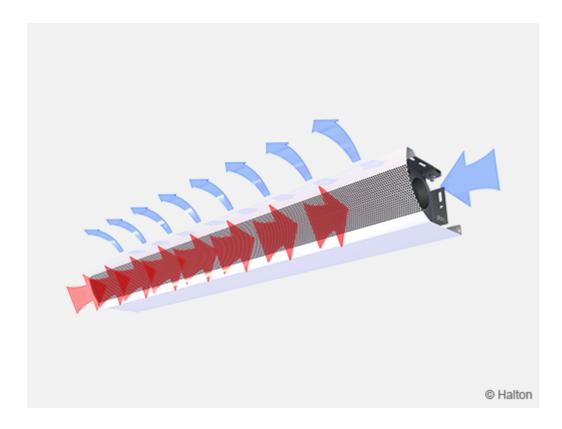

The supply air enters the plenum of the active chilled beam, from which it is diffused into the room through nozzles and the supply slot located on the top of the beam.

The air nozzle jets efficiently induce flow of ambient room air through the heat exchanger, where it is either cooled or heated.

The supply air jet is directed horizontally along the ceiling surface.


Two different nozzle sizes are available to enable different supply airflow rates.

The cooling and heating capacities of the chilled beam are controlled by regulating the water flow rate according to the control signal of the room temperature controller.

The Halton CBH active chilled beam is designed for exposed installation next to the wall.



Installation

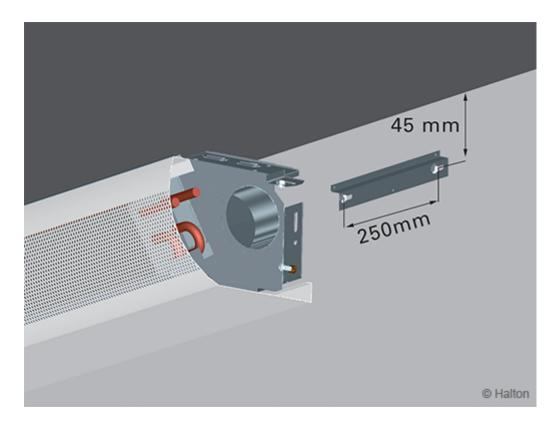

Fasten the unit to the wall using two assembly brackets, included in the delivery.

Adjust the beam horizontally and vertically to the desired position by using the two adjustment screws. The beam installation can be secured with screws through pre-drilled holes in the beam.

Install the main pipelines of the cooling and heating water loops above the level of the chilled beam to enable the venting of the pipework.

The supply air duct and pipe connection locations are specified when the product is ordered. However, due to the symmetrical design, the supply air duct and pipe connection locations can be, when necessary, changed at the installation site:

- remove the access plug and remount it in the other end of the beam
- loosen the four fixing screws, then turn around and reassemble the heat exchanger, finally screwing in the fixing screws.

Adjustment

Cooling

The recommended cooling water mass flow rate is 0.03...0.10 kg/s, resulting in a temperature rise of 1...3 °C in the heat exchanger.

To avoid condensation, the recommended inlet water temperature of the heat exchanger is 14...16 °C.



Heating

The recommended heating water mass flow rate is 0.01...0.04 kg/s, resulting in a temperature drop of 5...15 °C in the heat exchanger.

The recommended inlet water temperature of the heat exchanger is 35...45 °C.

Balancing and control of water flow rates

The water flow rates of the beam are balanced by installing the balancing valves in the outlet water pipes of the cooling and heating water circuits.

Cooling and heating output of the beam are controlled by regulating water mass flow rates. The mass flow rate can be controlled with either an ON/OFF valve or proportionally with a 2- or 3-way valve.

Adjustment of supply airflow rate

Each beam is equipped with a measurement tap for static pressure measurement, which enables fast and accurate measurement of the supply airflow rate.


The airflow rate is calculated with the formula below.

$$\textbf{q}_{v} = \textbf{k} * \textbf{I}_{eff} * \sqrt{\Delta p_{m}}$$

Model	Nozzle	k
CBH/F, CBH/K	3	0.73
CBH/G, CBH/M	4	1.04



Servicing

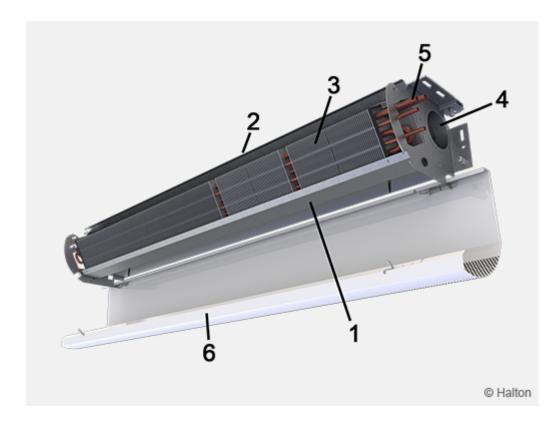

Code description

- 1. Front panel
- 2. Supply air plenum
- 3. Heat exchanger
- 4. Female supply air connection
- 5. Pipe connections
- 6. Duct cover

The active chilled beam Halton CBH with its openable construction facilitates fast and easy cleaning of the supply air plenum and heat exchanger. In beams longer than 2500 mm, the front panel can be opened in two sections.

Clean the front panel using a damp cloth.

Clean the heat exchanger using a vacuum cleaner, taking care not to damage the aluminium fins of the coil.

The supply air plenum has an access plug on the back end of the beam for cleaning the plenum.

Specification

The active chilled beam has an integral uni-directional air supply.

The supply air plenum is to be manufactured as a single construction free from joints. The front panel is openable and detachable for cleaning without using any special tools.

The active chilled beam is 295 mm wide and 230 mm high, with an inlet duct diameter of 100 mm.



The front panel is made of galvanised steel plate to a thickness of 0.75 mm. All visible parts are painted to white RAL 9003 or RAL 9010, 20 % gloss.

The cooling heat exchanger consists of a coil with aluminium fins and six 15-mm pipes connected in series.

All joints are fully soldered and factory pressure tested.

Connection pipes are manufactured from copper, with a wall thickness of 0.9-1.0 mm.

Heating is incorporated within the heat exchanger by two 10-mm pipes connected in series.

The pipework s maximum rated operation pressure is 1.0 MPa.

Each beam is protected by a removable plastic coating.

The duct connection and pipe ends are sealed during transit.

Each beam is to be identifiable by a serial number printed on a label attached to the beam.

Order Code

CBH/F-E-L-C; WD-TC-CO-FP-ZT

S = Direction of supply patterns & nozzle type

F Uni-directional / Right / Nozzle 3

Uni-directional / Left / Nozzle 3

G Uni-directional / Right / Nozzle 4

M Uni-directional / Left / Nozzle 4

E = Duct connection/Duct size/Damper

S1N Straight / 100 / Without damper

L = Total length

K

1800, +100, .., 5000

C = Effective length (Cooling coil length)

1500, +100, ..., 4700

Other options and accessories

WD = Location of pipe connections

S Straight

O Opposite

TC = Cooling / Heating functions (Coil type)

C Cooling

H Cooling and heating

D Cooling only, venting valves

F Cooling+heating, venting valves

CO = Colour



SW Signal white (RAL9003)
W Pure white (RAL 9010)
X Special colour (RALxxxx)

FP = Front panel type

C Standard

N Without front panel

ZT = Tailored product

N No

Y Yes (ETO)

Code example

CBH/F-S1N-1800-1500, WD=S, TC=C, CO=SW, FP=C, ZT=N

