Halton Vita VSG – Exhaust grille



© Halton

Overview

Halton Vita VSG is an exhaust grille for all Halton Vita OR Space and Halton Vita OR Zone solutions. It is an alternative to the Halton Vita VSC exhaust unit in designs where more flexibility in the placement of the exhaust is needed.

Application areas

- Operating rooms in hospitals
 - Halton Vita OR Space 5 solution
 - Halton Vita OR Space 7 solution


Key features

- Stainless steel exhaust air grilles equipped with a metal mesh fluff separator
- The stainless steel front panel is easy to remove and clean; can be sterilised in an autoclave



Dimensions and weight


Halton Vita VSG dimensions and weight

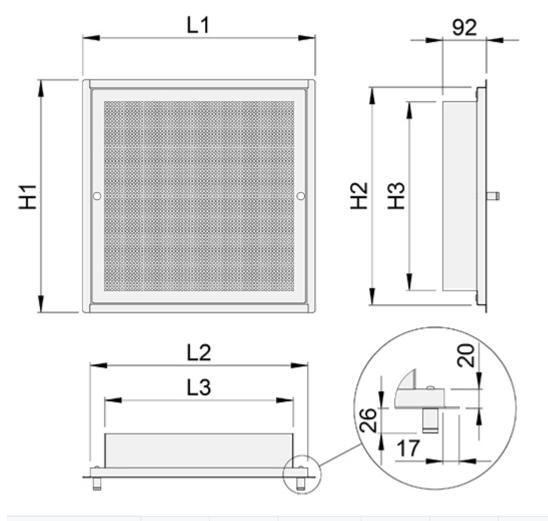

NS	L1	L2	L3	H1	H2	Н3	Weight (kg)
400×200	487	456	395	287	256	195	6.5
400×400	487	456	395	487	456	395	9.0
500×250	587	556	495	337	306	245	8.0
500×500	587	556	495	587	556	495	11.0
600×250	687	656	595	337	306	245	9.0
600×600	687	656	595	687	656	595	13.5



Halton Vita VSG frame dimensions

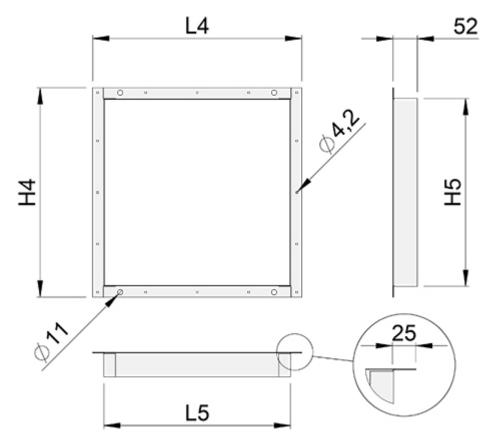

NS	L4	L5		H5
400×200	447	399	247	201
400×400	447	399	447	401
500×250	547	499	297	251
500×500	547	499	547	501
600×250	647	599	297	251
600×600	647	599	647	601

Material

The grille and the fluff separator are made of stainless steel (AISI 316).


Function

Air is exhausted from the space through the grille and the metal mesh fluff separator.

The purpose of the separator is to prevent fibre particles originating from the clothing of the



personel and other operational textiles from entering the ventilation system.

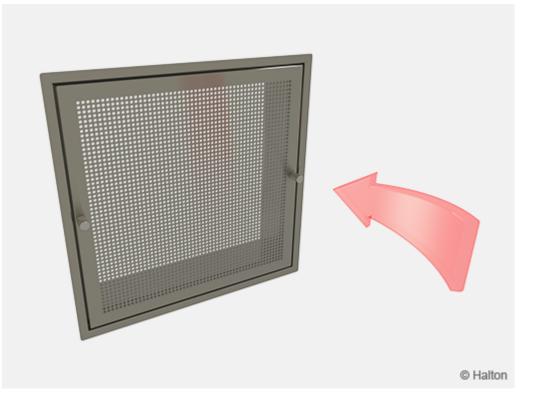

Filters

In the standard model, the exhaust grilles are equipped with stainless steel metal mesh fluff separators. The standard mesh size is 0.2 mm.


There are several exhaust grille options:

- Grilles with or without metal mesh filter
- Two grilles (bottom and top), or one grille (bottom)
- Painted or not painted duct

Note

Although the duct is painted it has to be covered with a wall construction.



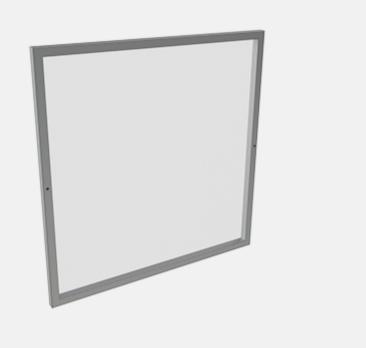


© Halton

Fig.1. Metal mesh fluff separtor

Installation

The exhaust grille is connected to the exhaust air ductwork. Wall or ceiling installations are possible.

The installation is typically performed by the ventilation contractor.

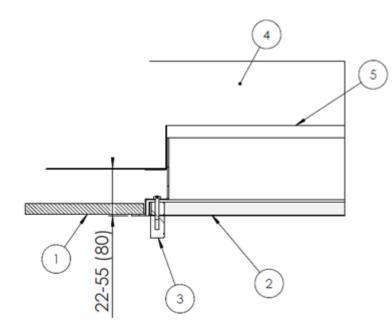

Key:



- 1. Wall construction
- 2. Exhaust grille
- 3. Fixing knob
- 4. Air duct
- 5. L-shape fixing bracket

Note: See the sizes for the required installation holes from the Dimensions section.


Servicing

Detach the perforated grille (2) by opening the screws (1). Wipe the grille with a damp cloth. Do not immerse in water.

The grille can also be sterilised in an autoclave ($t < 130^{\circ}$).

It is recomended to vacuum the metal mesh fluff separator (3) behind the grille regulary. It does not need to be removed for vacuuming.

Reassemble the grille and the srews.

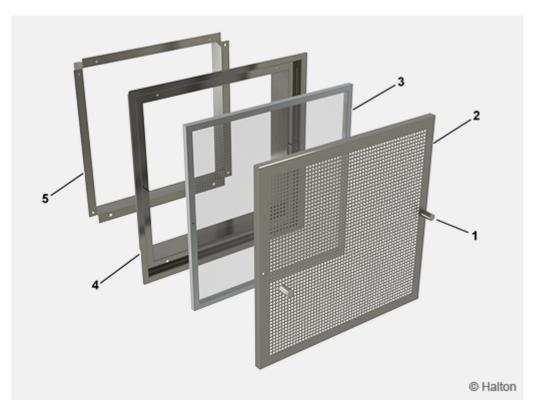

Key:

- 1. Screw (2 pcs)
- 2. Exhaust grille
- 3. Metal mesh fluff separator
- 4. Frame for grille
- 5. L-shape fixing bracket



Order Code

VSG-W-H, AF-ZT

W = Width 400, 500,600

H = Height 200, 250, 400, 500, 600

Other Options and accessories

AF = Air filter

A Metal mesh fluff separator (stainless steel, AISI 316)

N No filter

ZT = Tailored product

- N No
- Y Yes (ETO)

Code example

VSG-400-200,AF=A, ZT=N

